

# TECH CONTROLLERS

USER MANUAL

EU-280

EN



[www.tech-controllers.com](http://www.tech-controllers.com)



---

## **Table of contents**

I. Safety .....	4
II. Device Description .....	5
III. Installation of the Controller.....	6
IV. Operation of the Controller.....	9
IVa) Operating Principle.....	9
IVb) Main Screen Description .....	9
V. Controller Functions – Menu Options .....	13
V.a) Time.....	15
V.b) Securities.....	16
V.c) Screen .....	17
V.d) Weekly Control .....	18
V.e) Boiler Control .....	18
V.f) Language Selection .....	19
V.g) Information about the Operating Program .....	19
V.h) Settings .....	20
VI. Alarms .....	20

## I. Safety

Please read the following regulations carefully before using the device. Failure to comply with these instructions may cause injuries and damage to the device. This instruction booklet should be carefully stored.

To avoid unnecessary errors and accidents, ensure that all people who use this device become familiar with its operation and safety functions. Please keep these instructions and make sure that they accompany the device in the case of its transfer or sale, so that any user during the period of its use will have the appropriate information and instruction on device operation and safety. For safety of life and property follow precautions consistent with those listed in the operating manual, as the manufacturer shall not be held liable for damage caused by negligence.



### WARNING

- **Live electrical device.** Before any activities related to power supply (connecting wires, device installation, etc.) you must ensure that the regulator is not connected to the electrical grid.
- Installation should be carried out by a person with the appropriate electrical authorizations.
- You must measure the resistance of electrical motors earthing and resistance of electrical wires insulation before activating the controller.
- The regulator is not intended for operation by children.



### NOTE

- Atmospheric discharges may damage the controller, therefore during storms it is necessary to disconnect the device from the electrical grid by pulling out the power plug.
- The controller must be used in accordance with its intended purpose.
- Please check the technical condition of wires before and throughout the heating season. Fastening of the controller should be also checked, and any dust and dirt should be cleaned.

## II. Device Description

Application of the EU-280 room regulator provides convenient steering and control of room temperature, boiler, tank and mixing valves directly from home without the need to go down to the boiler room. The controller is adapted to cooperate with various kinds of main controllers equipped with RS communication: standard controllers, pellet controllers (equipped with ignition switch) and installation controllers.

Its large, legible, colourful touch-screen display allows for convenient operation of the regulator and modulation of its parameters.

The EU-280 room regulator enables:

- Control of room temperature
- Control of the CH pump temperature
- Control of the DHW temperature
- Control of the mixing valves temperature (available in cooperation with an additional valve module)
- View of external temperature
- Weekly heating program
- Alarm clock
- Parental lock
- Display of current boiler temperature and room temperature

Controller equipment:

- Large, legible, colourful, touch-screen display
- Built-in room sensor
- RS communication cable for boiler controller
- RS wireless communication module – EU-260 (additional option)





### III. Installation of the Controller

The controller should be installed by a person with the relevant qualifications.

**! WARNING**


There is a danger of fatal electrical shock from touching live connections. You must disconnect the electrical connection and protect against accidental connection before working with the regulator.

The EU-280 regulator is intended for installation on the wall.

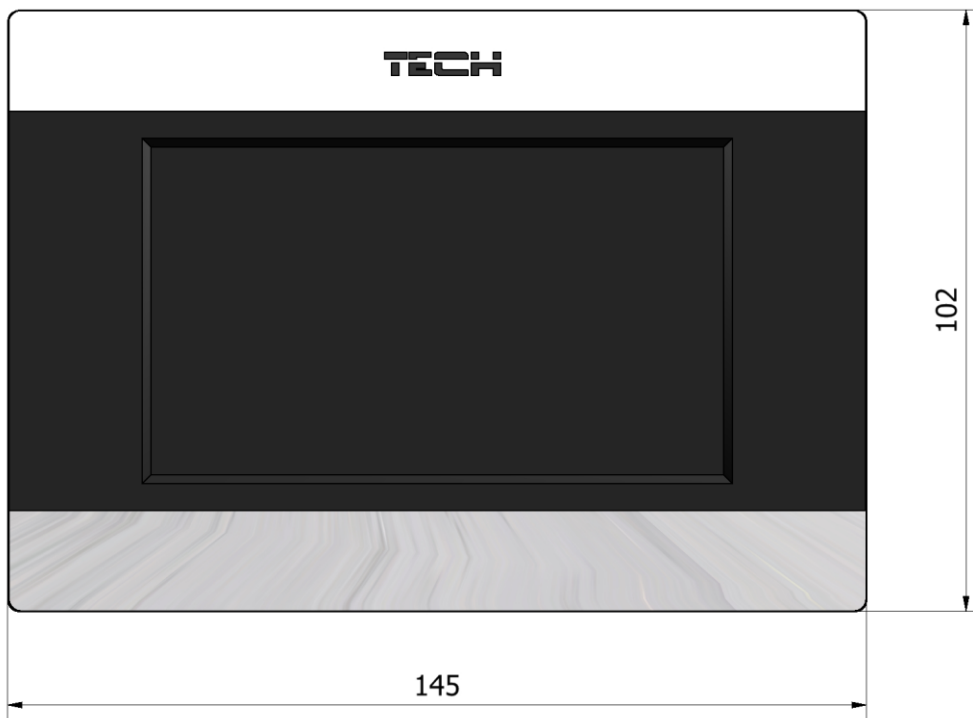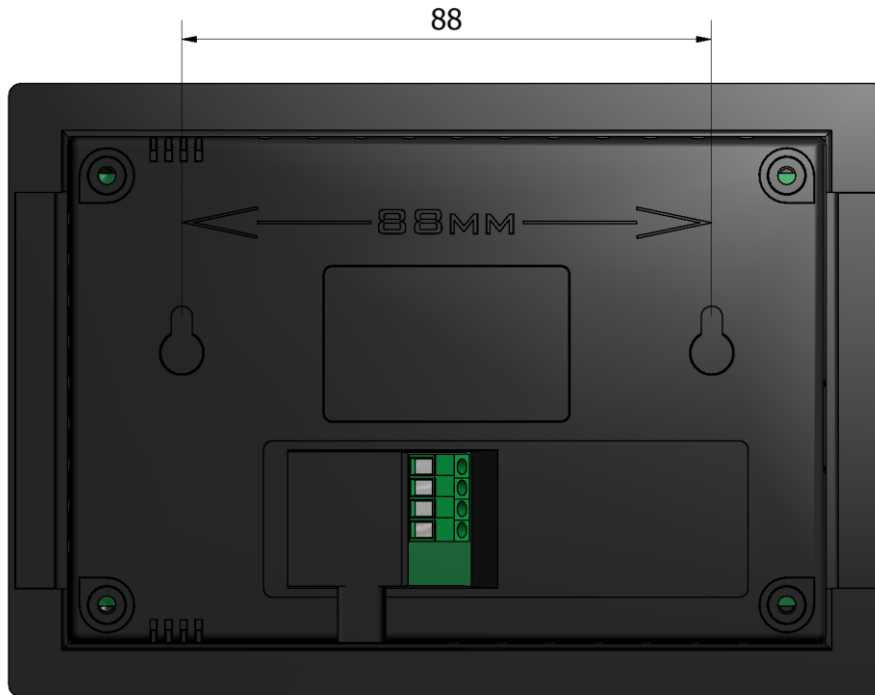

**Scheme of connections – Wire Connection:**

The EU-280 room regulator, along with the main controller, should be connected with a four-wired cable according to the scheme below:

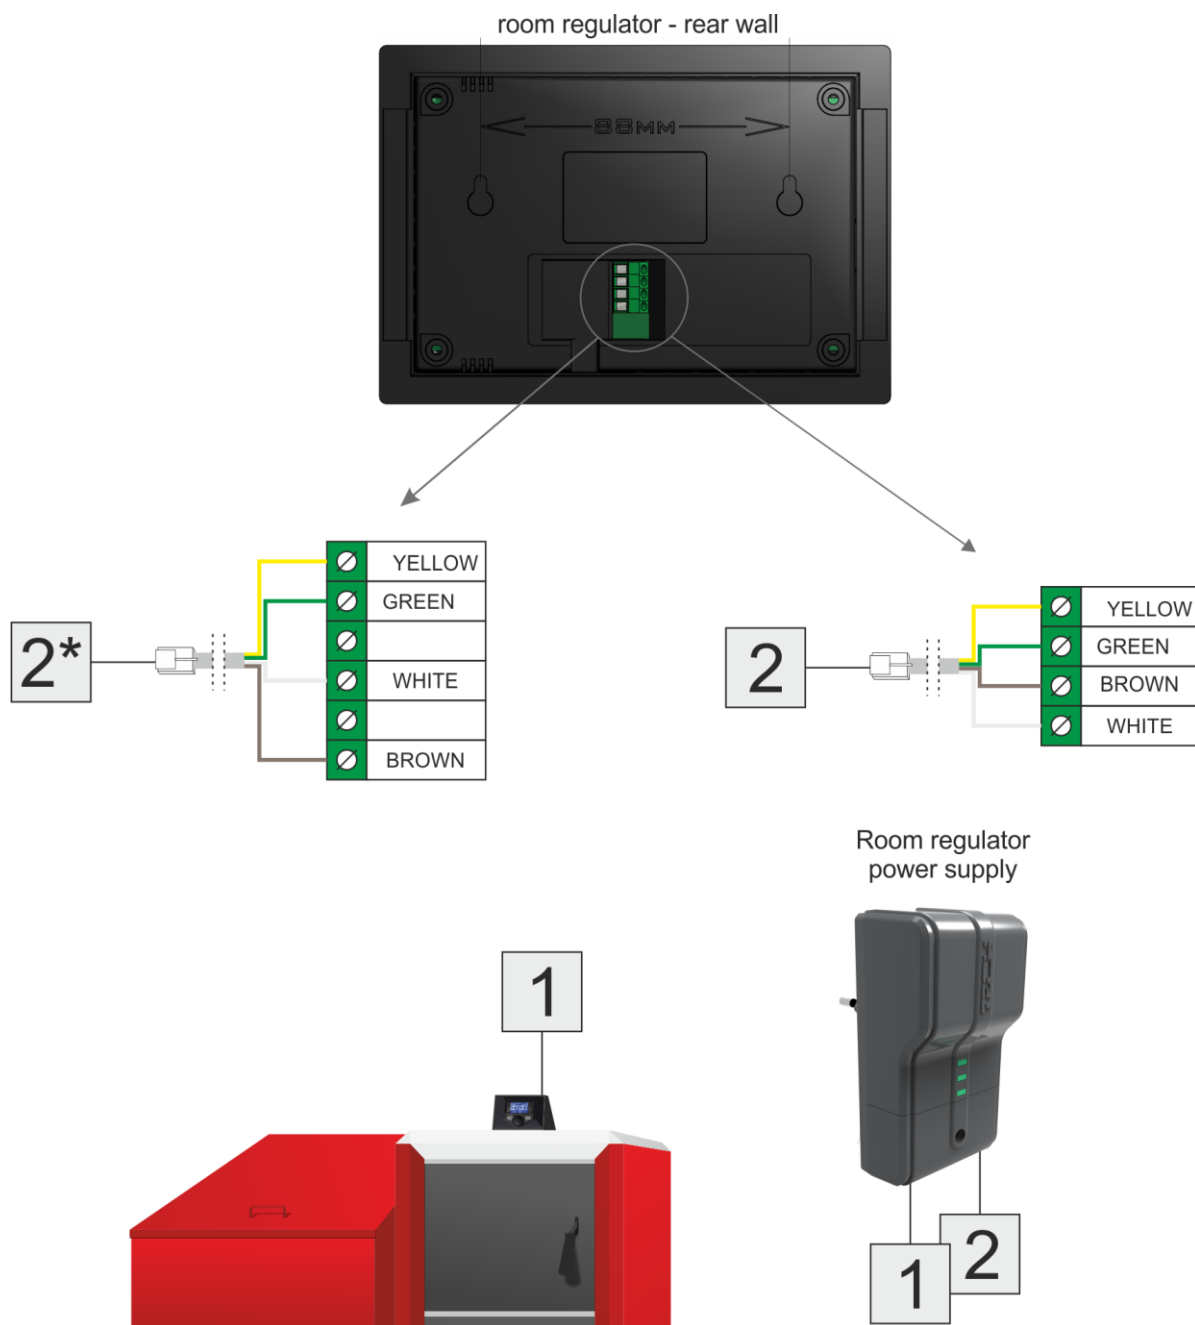


The four-wired cable is connected to the regulator inputs in accordance with colours of wires. The cable is then connected to RJ12 connector which you should plug into the regulator power supply – the place of connection is marked on the scheme as point 2 (there is additional description on the power supply). The regulator power supply should be connected to the controller on the boiler by means of a 4-wired cable connected on both sides to the RJ12 connector – marked on the connection scheme as point 1.

**Scheme of Connections – Wireless Connection:**

Using the EU-260 set you can combine the EU-280 room regulator with the main controller in a wireless manner.

Connections should be carried out in accordance with the following scheme:

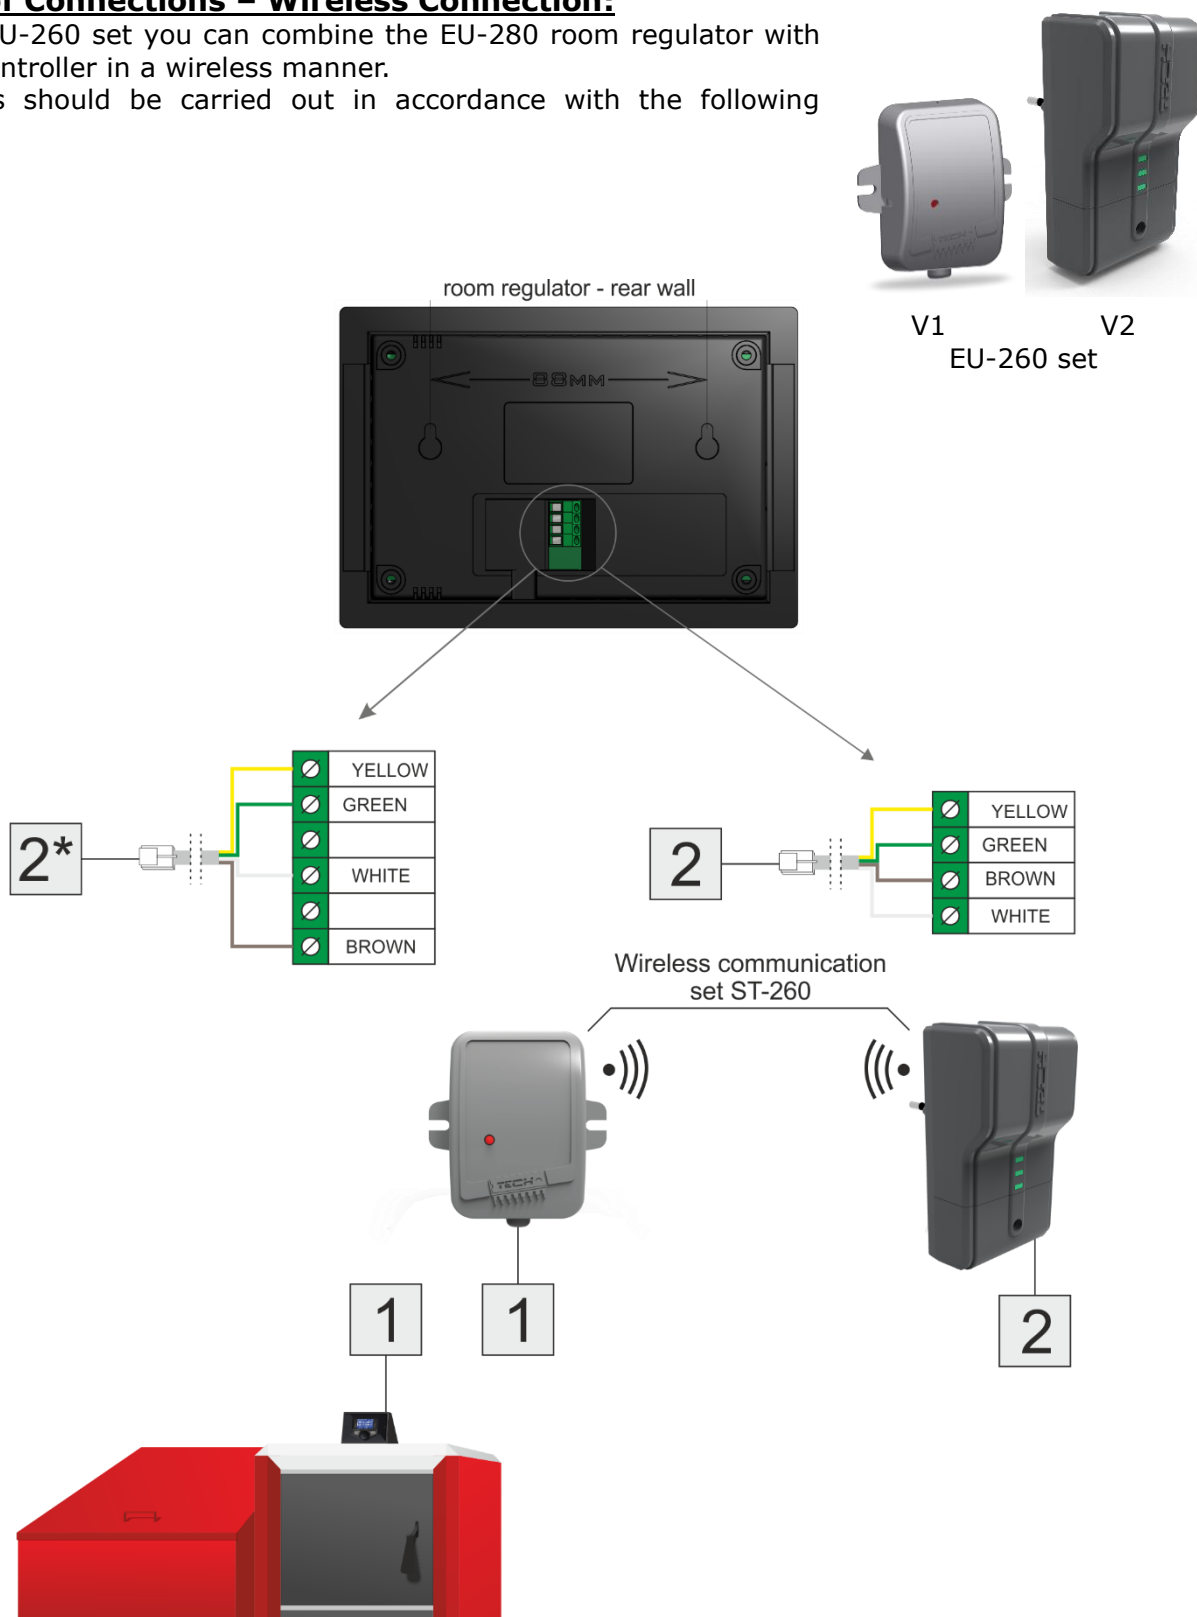

The four-wired cable is connected to the regulator connector in accordance with colours of wires. This cable is then connected to the RJ12 connector and should be plugged into the v2 module – the place of connection is marked on the scheme as point 2 (there is an additional description on the module). The controller on the boiler should be connected to the v1 module by means of a 4-wired cable, and connected at the other end to the RJ12 connector - on the connection scheme this is marked as point 1.

\* Optionally, a vertical-6-connector may be used instead.



## IV. Operation of the Controller

### IVa) Operating Principle

The room regulator sends a signal on additional heating or underheating to the main controller. Depending on the specific settings, the signal for additional heating of rooms may e.g.: switch off the CH pump, reduce the set temperature of the boiler by the set one (settings can be adjusted with the main controller). The room regulator also enables change of some settings within the main controller e.g.: ability to change and set the temperature of the boiler, pump operation modes, etc.

### IVb) Main Screen Description

The controller is equipped with a large touch-screen display. The main screen displays the current state of basic parameters for the boiler.

Depending on the user's settings, the screen may display a visible installation screen or the panels screen. Data which is displayed on the main screen of the room regulator depends on settings of the main controller and its type.


**! NOTE**

Each change of the set temperatures, time or other settings on the room regulator or boiler controller introduces a new setting in both devices.

**! NOTE**

Factory settings show the main screen as the installation screen which the user may change on the panels screen.

#### Main Screen Description – Installation Screen:

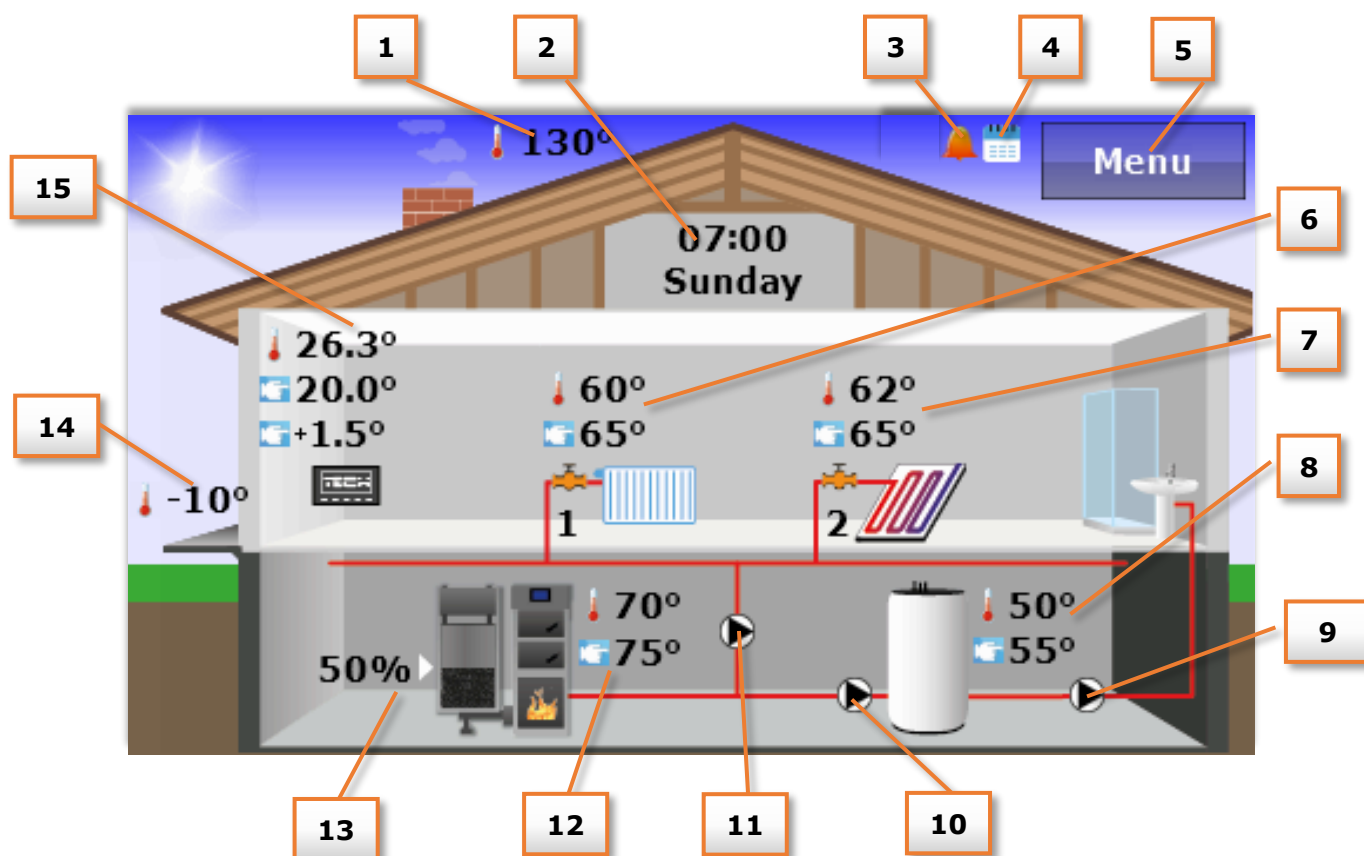

## EU – 280 user's manual

---

1. Temperature of smoke (visible only when using the smoke sensor on the main controller).
2. Current time and date – clicking the screen in this area will switch you to the Time menu which enables you to introduce changes to the current time and date.
3. Icon which signals an activated alarm clock.
4. Icon which signals an activated weekly control.
5. Access to the controller menu.
6. Valve 1 temperature: current and set - clicking the screen in this area will switch you to the menu which enables you to introduce changes to the set temperature of valve 1.
7. Valve 2 temperature: current and set - clicking the screen in this area will switch you to the menu which enables you to introduce changes to the set temperature of valve 2.




### **NOTE**

Data concerning the valve must be loaded and registered in order to be displayed on the main screen of the room regulator on the main controller (in the case of external modules of the valve, e.g.: the EU-431N). In the circumstance of the valve not being installed, the room regulator will display an "!" icon.

8. Boiler 1 temperature: current and set - clicking the screen in this area will switch you to the menu which enables you to introduce changes to the set temperature of the boiler.
9. Icon which signals circulation pump – animation which displays current pump operation.
10. Icon which signals HUW pump - animation which displays current pump operation.
11. Icon which signals CH pump - animation which displays current pump operation.
12. Boiler temperature – current and set. If the third temperature value is displayed it means that weekly control is activated and this value indicates the current adjustment of the set temperature of the boiler. Clicking the screen in this area will switch you to the menu which enables you to change the set temperature of the boiler.
13. The current level of fuel in the feeder.
14. External temperature (visible only when using the external sensor in the main controller).
15. Room temperature – current and set. If the third temperature value is displayed it means that weekly control is activated and this value indicates the current adjustment of the set room temperature. Clicking the screen in this area will switch you to the menu which enables you to change the set room temperature.

**Main Screen Description – Panels Screen:**

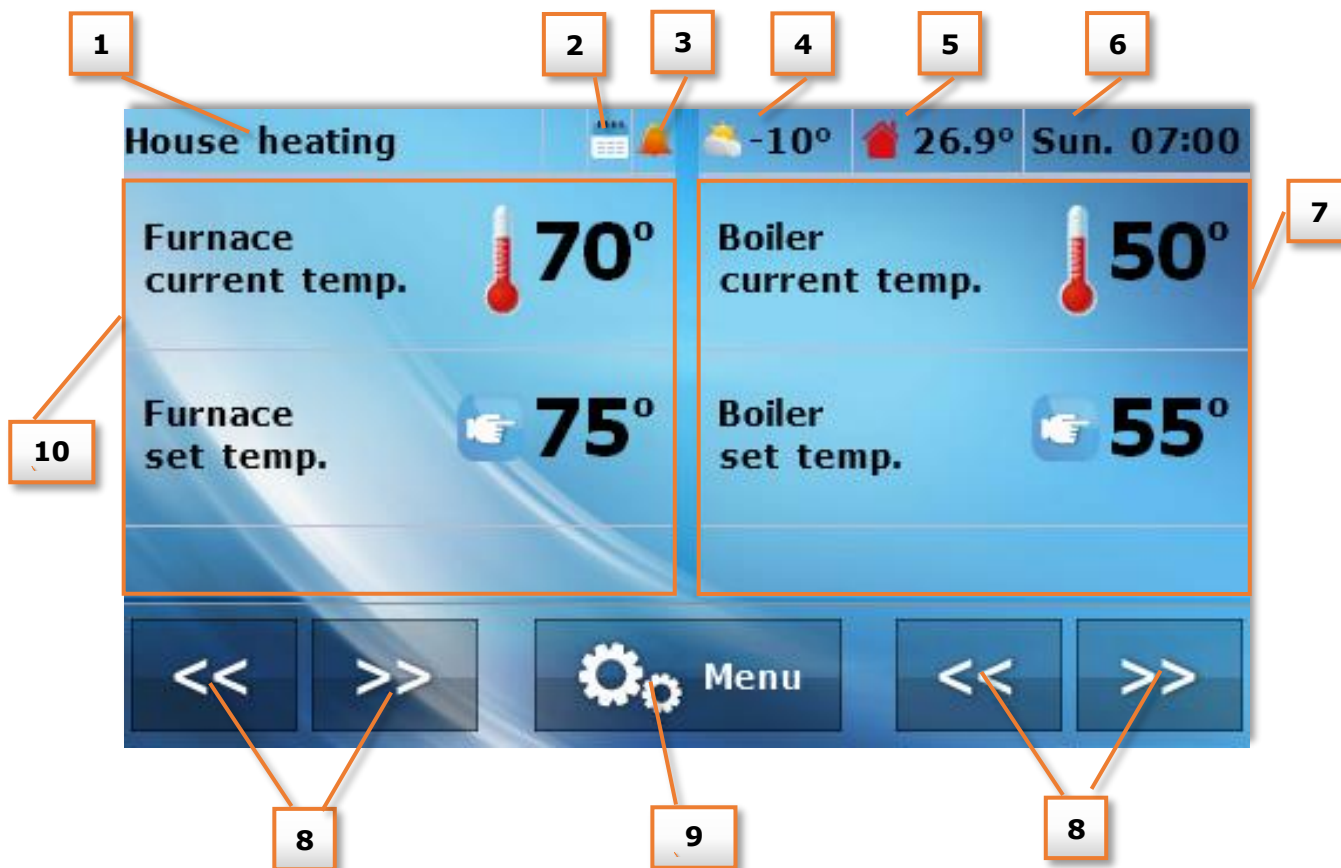

1. Active operation mode of pumps
2. Icon which shows an enabled weekly control option.
3. Icon which shows an activated alarm clock.
4. External temperature (visible only when using the external sensor on the main controller).
5. Current room temperature.
6. Current time and date.
7. Right parameters panel.
8. Buttons allowing change of active view of parameters panel.
9. Access to the controller menu.
10. Left parameters panel.

With the use of buttons allowing change of active view of parameters panels, the user obtains access to additional information on the installation condition:

- Room temperature panel


View of current temperature and the set temperature inside the room - after clicking on this panel it is possible to change the set room temperature:



## EU – 280 user's manual

- Boiler temperature panel

View of current temperature and the set temperature of the boiler - after clicking on this panel it is possible to change the set temperature of the boiler.

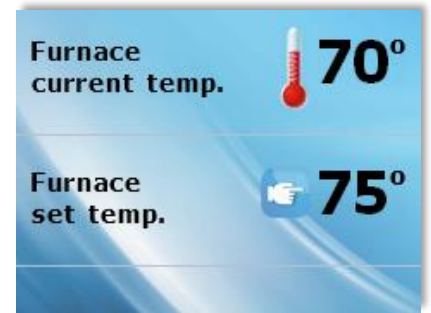

- Boiler temperature panel

View of the current temperature and the set temperature of the boiler - after clicking on this panel it is possible to change the set temperature of the boiler.




- Valves data panel

View of the current temperature and set temperature of valve 1, 2, 3 or 4 - after clicking on this panel it is possible to change the set temperature of the selected valve.




- Fuel level panel

View of the fuel level in the boiler (this mode is only active when selected by the user with the boiler controller).

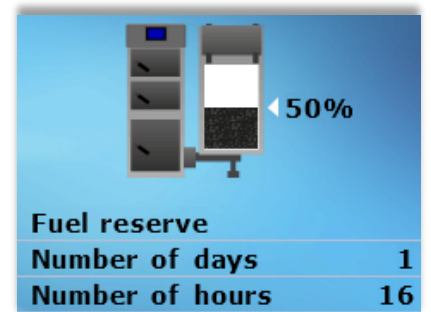

- Charts panel

Current temperature chart: boiler, tank or inside the room - graphically presents temperature changes in time

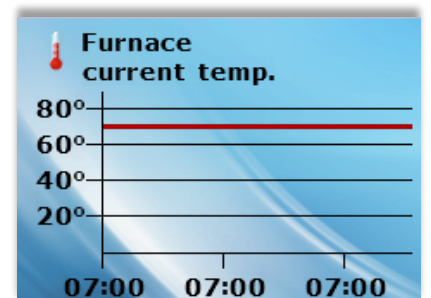


- Pellet boiler change phase panel

This sub menu allows the user to enable or disable the boiler. This option is only unavailable during daily boiler operations, which fall under temporary operation settings.




- Pump operation mode-change panel

View of the operation mode – shows the active pumps operation mode (active view only in the case of the pellet type boiler) – after clicking on this panel it is possible to change the pumps operation mode. A selection can be made from among the following modes: Home heating, Priority, parallel pumps, summer mode with additional heating and summer mode without additional heating. Detailed description of pumps operation modes can be found in the operation manual of the boiler controller.

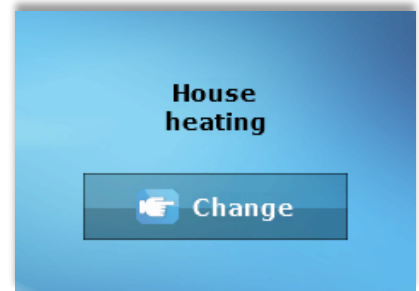

## V. Controller Functions – Menu Options

During normal operation of the regulator, the devices home page is visible on the **graphic display**. After clicking on the menu the user is switched to that particular controller function.

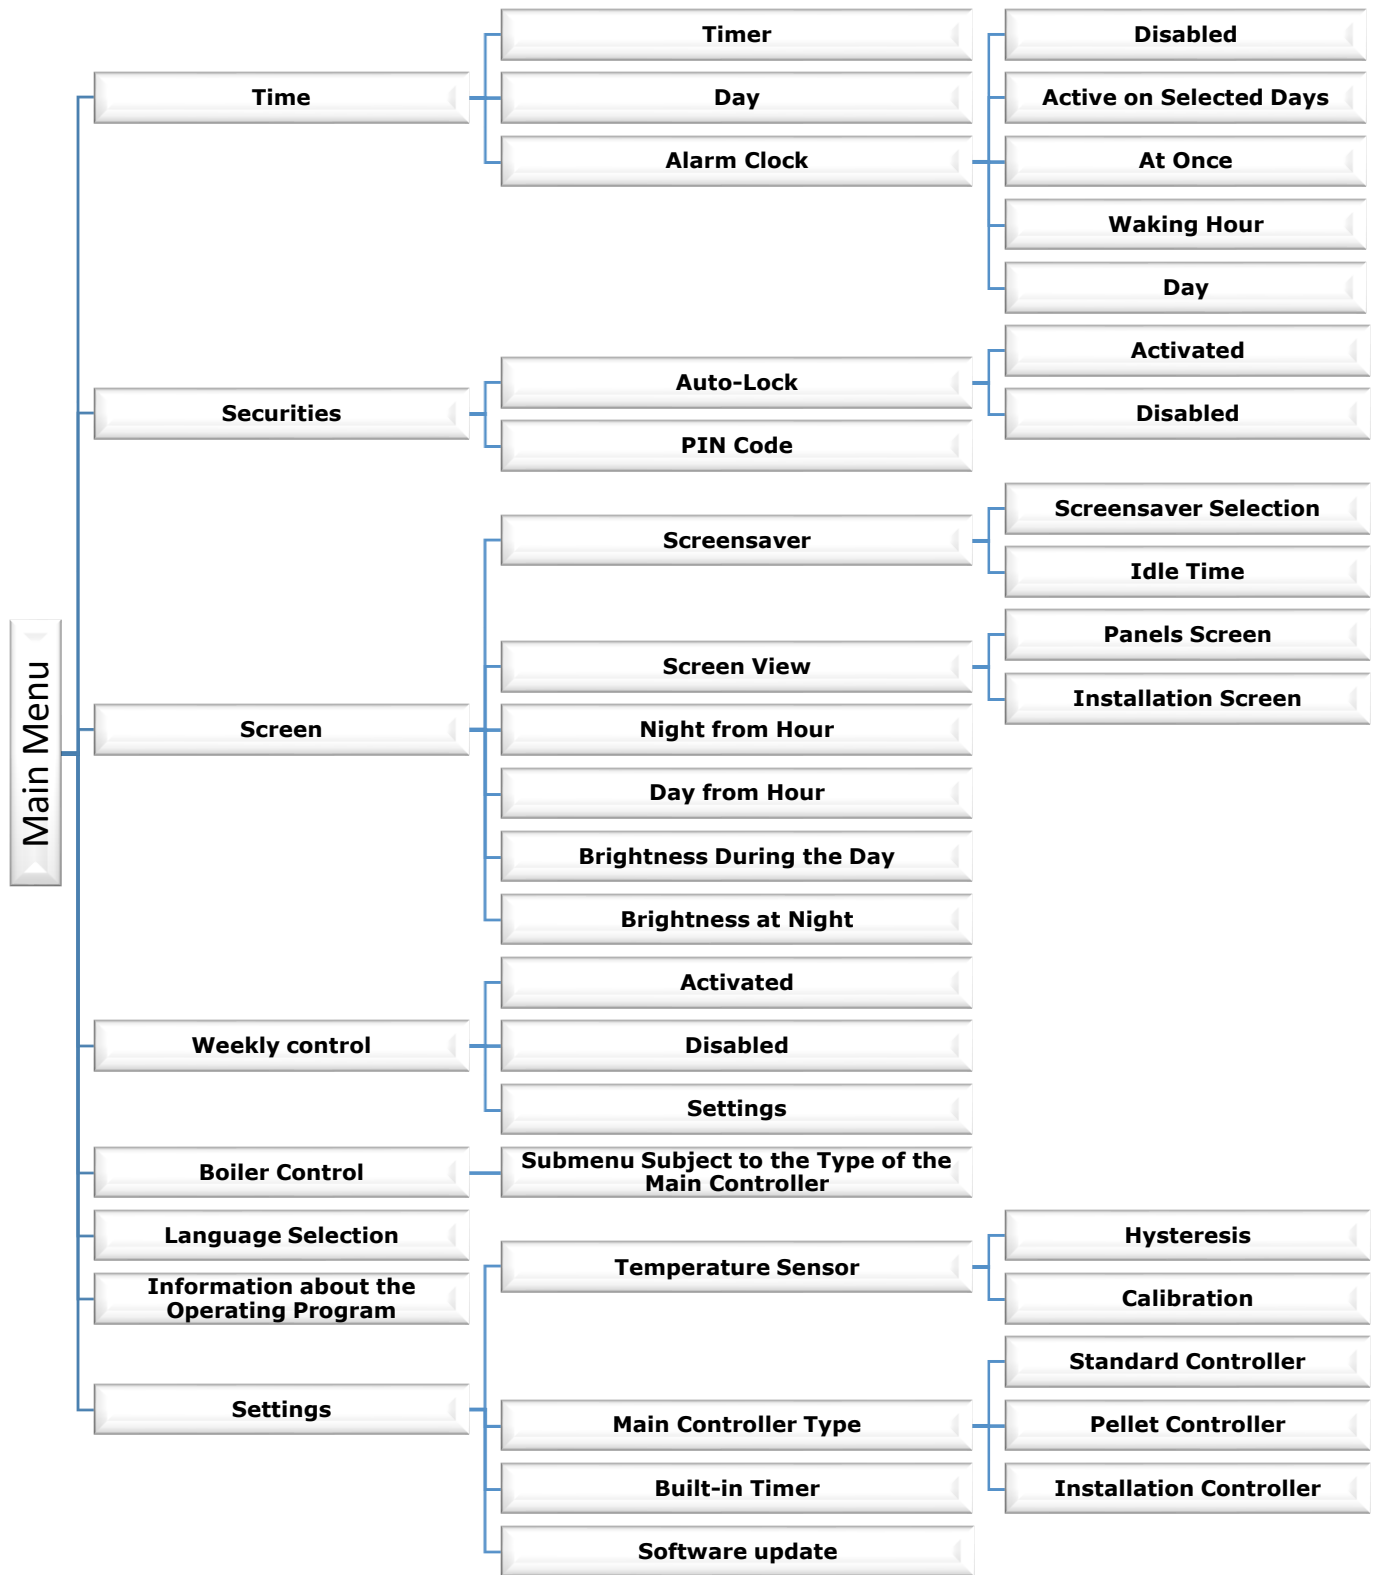

## V.a) Time

After clicking on the Time icon on the main menu you will see the panel used for changing timer settings, current date and alarm clock settings.



### Timer

This function allows the user to set the current time, according to which the regulator will then operate.



### Date

This function allows the user to set the current date, according to which the regulator will then operate.



### Alarm clock

This function allows the user to set the alarm clock. There is an option to set the alarm clock so that it will activate only on selected days (active on selected days) or whether it will activate once each time.





## EU – 280 user's manual

- waking hour can be set by means of using the "up" and "down" arrows.



- when the alarm clock is to be active only on selected days, the user must select the days on which the alarm clock is to be activated.



Controller screen view at the time of activation of the alarm clock.



## V.b) Securities

After clicking on the Securities icon on the main menu you will see the panel used for changing settings of the parental lock.



### **Auto-Lock**

After clicking on the Auto-lock icon you will see the panel used for switching the parental lock on or off.





## PIN Code

In order to set the PIN code (necessary for regulator operation when the lock is active - you must click PIN code icon



## **! NOTE**

The factory set PIN code is "0000".

## **V.c) Screen**

After clicking on the *Screen* icon on the main menu you will see the panel used for changing the screen settings.

### Screensaver

On the controller, it is possible to set the screensaver which will activate after a fixed idle time. In order to return to the main screen view it is enough to touch any place on the screen. The user may adjust the screen view during the screen time-out by setting particular parameters:

- **Screensaver selection**

By clicking selection of the screensaver you switch to the panel which enables you to turn off the screensaver option (**No screensaver**), or set the screensaver in the form of:

- **Clock** – the screen displays the clock.
- **Blank** – after the pre-defined time of inactivity the screen goes blank.
- **Blanked only at night** - the screen will go blank at nighttime.

- **Idle Time**

This function enables you to set the time after which the screensaver will activate.

### Screen View

After clicking on the screen view icon the user has the ability to set the appearance of the main screen. By default it is set to the pre-installed screen, but you can also set the panel screen.



### Night from hour/Day from hour

In further sub-menus of the screen menu you can decide which hours the controller will switch to the night mode (Night from hour) as well as return to the day mode (Day from hour).

### Brightness during the day/brightness at night

After clicking on the icon, the user may set the percentage value of the screen brightness during the day and at night.

## V.d) Weekly Control

This function allows you to change the set temperature of the room in a day-night cycle.


You can set each day you can set the device to change to a specific temperature at any hour on the main set value in a 24 hour day-night cycle.




First select the day on which time deviations will be set – for this option click on the Settings icon and then select the day for which you want to set the temperature.



After selecting the day, you will see the panel for setting temperature deviations within selected time intervals.

To facilitate this, you can copy the set deviation for subsequent hours – just click on the symbol  on the selected value and by means of the arrows copy selected settings for subsequent hours.

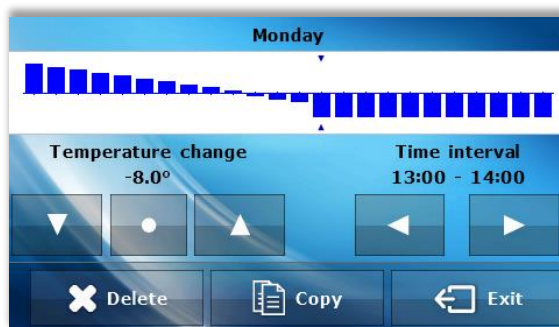

By clicking on the *Copy* icon you can copy the settings of any whole day for the subsequent days.

Weekly setting of the set temperatures reduces heating costs and provides the desired level of thermal comfort throughout the whole day. The parameter which determines the correct operation of this function is the current time and day settings.



## V.e) Boiler Control

The parameters of this submenu depend on the main controller type.

### Submenu for Standard Controller:

- Set temperature

After clicking on this icon you can change the value of set temperature on the boiler (you can do this by clicking on 'view of parameters' from the starting screen).

- Operation modes

After clicking on this icon, you can easily change the pumps operation mode (in the boiler controller) between: Home heating, Priority, parallel pumps, summer mode, Floor heating. More detailed descriptions of these operating modes can be found in the operation manual for the boiler controller.

**Submenu for the pellet controller:**

- Set temperature

After clicking on this icon you can change the value of the set temperature on the boiler (you can do this by clicking on 'view of parameters' from the starting screen).

- Lighting

By clicking on this icon you will activate the process of lightning the boiler.

- Extinguishing

By clicking on this icon you will activated the process of extinguishing the boiler.

- Operating mode

After clicking on this icon, you can easily change the pumps operation mode (on the boiler controller) between: Home heating, Priority, parallel pumps, summer mode, Floor heating. More detailed descriptions of these operating modes can be found in the operation manual for the boiler controller.



**Submenu for the Installation Controller:**

- Operating modes

After clicking on this icon, you can easily change the pumps operation mode (with the boiler controller) between: Home heating, Priority, parallel pumps, summer mode, Floor heating. A more detailed description of these operating modes can be found in the operation manual for the boiler controller.

**V.f) Language Selection**

After clicking on the *Language selection* icon on the main menu you will see the panel used for changing the language for the user.



**V.g) Information about the Operating Program**

By clicking on this icon the display will show the boiler manufacturer's logo along with the software version.



## V.h) Settings

After clicking on this icon you can change additional parameters.

### Temperature Sensor

After clicking on this icon, you can see the panel which allows the user to change the hysteresis settings and calibration of the temperature sensor of the room regulator.

- Hysteresis

Hysteresis introduces tolerance for the set temperature preventing unwanted oscillations under minimal temperature fluctuations ( $0 \div 10^{\circ}\text{C}$ ) with accuracy to  $0.1^{\circ}\text{C}$ . Example: when the set temperature constitutes  $23^{\circ}\text{C}$  and hysteresis is set to  $1^{\circ}\text{C}$ , the room regulator will begin to indicate under heating in the room after the temperature falls to  $22^{\circ}\text{C}$

- Calibration

Calibration of the device is set during the installation. It can additionally be set after a longer period of use of the regulator - if the room temperature measured by the internal sensor differs from the current temperature. The regulation range is as follows:  $-10$  to  $+10^{\circ}\text{C}$  with accuracy to  $0,1^{\circ}\text{C}$



### Main Controller Type

After clicking on this icon, the user selects the main controller type with which room regulator will cooperate: standard, pellet or installation. After the selection is made, the *Boiler control* submenu will be changed.

### Software update

Insert the memory stick with the new software version in the USB port and click on the icon. The update will happen automatically.

## VI. Alarms

The EU-280 room temperature regulator will signal all alarms generated by the main controller. When the alarm activates, the room regulator will send sound signals and the display will show the same message as the boiler controller. In the case of internal sensor damage "room temperature sensor fault" will appear.



**Technical data**

Power supply voltage	5V DC
Power consumption	1,3W
Operating temperature	5°C ÷ 50°C
Measurement error	+/- 0,5°C
Room temperature adjustment range	5°C ÷ 40°C

**Room regulator power supply**

Power supply	230V+/-10%/50Hz
Max. power consumption	4W
Ambient temperature	5°C ÷ 50°C

# TECH TECH CONTROLLERS

## EU Declaration of conformity


---


Hereby, we declare under our sole responsibility that **EU-280** manufactured by TECH STEROWNIKI II Sp. z o.o., head-quartered in Wieprz Biała Droga 31, 34-122 Wieprz, is compliant with Directive **2014/35/EU** of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of Member States relating to **the making available on the market of electrical equipment designed for use within certain voltage limits** (EU OJ L 96, of 29.03.2014, p. 357), **Directive 2014/30/EU** of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of Member States relating to **electromagnetic compatibility** (EU OJ L 96 of 29.03.2014, p.79), Directive **2009/125/EC** establishing a framework for the setting of ecodesign requirements for energy-related products as well as the regulation by the MINISTRY OF ENTREPRENEURSHIP AND TECHNOLOGY of 24 June 2019 amending the regulation concerning the essential requirements as regards the restriction of the use of certain hazardous substances in electrical and electronic equipment, implementing provisions of Directive (EU) 2017/2102 of the European Parliament and of the Council of 15 November 2017 amending Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (OJ L 305, 21.11.2017, p. 8).

For compliance assessment, harmonized standards were used:

**PN-EN IEC 60730-2-9:2019-06, PN-EN 60730-1:2016-10, EN IEC 63000:2018 RoHS.**

Wieprz, 13.06.2022

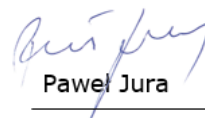  
Paweł Jura

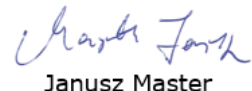  
Janusz Master

Prezesa firmy



*Care for the natural environment is of primary importance for us. We are aware of the fact that we manufacture electronic devices and it obligates us to dispose used elements and electronic equipment in a manner which is safe for the nature. As a result, the company received a registry number assigned by the Chief Inspector of Environmental Protection. The symbol of a crossed out disposal bin on the product means that the product must not be thrown out to general waste bins. By segregating waste intended for recycling, we help to protect the natural environment. It is the user's responsibility to transfer waste equipment to the selected collection point for the recycling of waste generated from electrical and electronic equipment.*

**TECH  
TECH  
CONTROLLERS**

**Central headquarters:**

ul. Biała Droga 31, 34-122 Wieprz

**Service:**

ul. Skotnica 120, 32-652 Bulowice

phone: **+48 33 875 93 80**

e-mail: **serwis@techsterowniki.pl**

**[www.tech-controllers.com](http://www.tech-controllers.com)**